

Foreword

General

This user's manual (hereinafter referred to be "the Manual") introduces the functions, installation and operations of the camera.

Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual.

Symbol	Note
ADANGER DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
MARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
⚠ CAUTION	Indicates a potential risk which, if not avoided, may result in property damage, data loss, lower performance, or unpredictable result.
A ELECTRICITY	Indicates dangerous high voltage. Take care to avoid coming into contact with electricity.
ASER BEAM	Indicates a laser radiation hazard. Take care to avoid exposure to a laser beam.
& ESD	Electrostatic Sensitive Devices. Indicates a device that is sensitive to electrostatic discharge.
©— ^{л[]} TIPS	Provides methods to help you solve a problem or save you time
NOTE	Provides additional information as the emphasis and supplement to the text.

About the Manual

- The Manual is for reference only. If there is inconsistency between the Manual and the actual product, the actual product shall govern.
- All the designs and software are subject to change without prior
 written notice. The product updates might cause some differences
 between the actual product and the Manual. Please contact the
 customer service for the latest program and supplementary
 documentation.

- There still might be deviation between the actual value of some data and the value provided, if there is any doubt or dispute, please refer to our final explanation.
- Please contact the supplier or customer service if there is any problem occurred when using the device.
- We are not liable for any loss caused by the operations that do not comply with the Manual.
- All trademarks, registered trademarks and the company names in the Manual are the properties of their respective owners.
- Please visit our website or contact your local service engineer for more information.
- If there is any uncertainty or controversy, please refer to our final explanation.

1 Introduction

1.1 General


This series of products comply with the HDCVI standard and support the transmission of audio, video and control signal over coaxial cable. They produce video signal with up to 6MP and 4K resolution and require XVR device that comply with HDCVI standard to achieve high speed, long distance and zero lag transmission of the signal. They are applicable to cover the high definition monitoring needs for locations with complex lighting conditions such as financial center, telecom site, supermarket, hotel, government, school and factory.

1.2 Features

- Support over 300 meter real-time transmission of audio, video and control signal from RG59 cable.
- Excellent low-light performance with 2D/3D noise reduction.
- Adopt motorized vari-focal lens, support zoom/focus adjustment on XVR device (available on select models).
- Auto switch from vivid color images by day and black-and-white images at night with ICR.
- Provide clear IR imaging by adjusting IR light to moving objects with smart IR.
- Configuring devices easily with OSD, the OSD supports various customized effects.
- Support switching output mode between CVI/CVBS/AHD/TVI through DIP switch.
- Operate on DC 12V ± 30%/AC24V ± 30% with wide voltage range (available on select models).
- Serve as a DC 12V 2W power source (available on select models).
- IP67 and IK10 rated.

2 Design

2.1 Dimension

 


 


Figure 2-2 Model B(mm [in]) and Model C (mm [in])

2.2 Cable

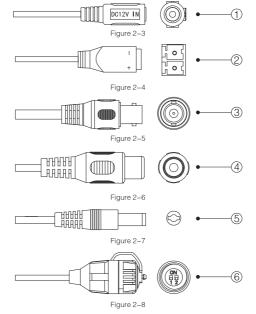

For more information about cable ports, see Table 2–1; for the operation method of (6) (DIP switch), see Table 2–2.

Port Name	Function
DC 12V	Inputs DC 12V power. Please be sure to supply power as
Power Input	instructed in the Manual.
	⚠ CAUTION
	Device abnormity or damage could occur if power is not
	supplied correctly.
DC 12V or AC	Inputs DC 12V or AC 24V power. Please be sure to supply
24V Power	power as instructed in the Manual.
Input	A CAUTION
	Device abnormity or damage could occur if power is not
	supplied correctly.
Video Output	Connects to XVR to output video signal.
Audio Input	Connects to sound-pick-up devices to receive audio
	signal.
Power Output	Supplies DC12V 2W power.
DIP Switch	Dial switches to change output mode. Switch up indicates
	"ON", switch down indicates "OFF".
	DC 12V Power Input DC 12V or AC 24V Power Input Video Output Audio Input Power Output

Table 2-1

Table E				
Switch1	Switch2	Output Mode		
OFF	OFF	CVI		
ON	ON	CVBS		
ON	OFF	AHD		
OFF	ON	TVI		

Table 2-2

3 Installation

⚠ CAUTION

- Make sure the mounting surface is strong enough to hold at least three times of the camera weight.
- Keep the protection film on the dome before installation and adjustment finished to avoid possible scratch.
- Properly handle the device after unpacking. Do not expose the device in humid environment.
- The following figure is for reference only, actual product shall prevail.


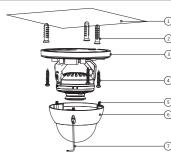


Figure 3-1

No.	Item	No.	Item	No.	Item	No.	Item
1	Mounting surface	2	Expansion bolt	3	Pedestal	4	Self-tapping screw
5	Locking screw	6	Dome	7	Wrench		

Table 3-1

- Step 1 Find the mounting template sticker from the accessory pack and stick it to the mounting surface ①.
- Step 2 Drill screw holes (and the cable outlet hole if it needs to go through the mounting surface) on the mounting surface as indicated on the mounting template, then insert expansion bolts ② from the accessory pack in the screw holes.
- $\underline{\textbf{Step 3}} \quad \text{Loosen the three locking screws § on the dome § with the supplied wrench $\widehat{\mathcal{T}}$ and take the dome § off.}$
- Step 4 Adjust the location of the pedestal (3) according to cable outlet requirement (top out or side out), then pull the cable out through mounting surface or the side wire tray. Align the screw holes on the pedestal (3) to those on the mounting surface, then put in and fasten the supplied self-tapping screws (4) to attach the device to the mounting surface.
- <u>Step 5</u> Connect the camera to power source and the XVR device, and the live view screen will be displayed. Aim the lens to the ideal angle and adjust the focus until you get clear image. See Figure 3–2.

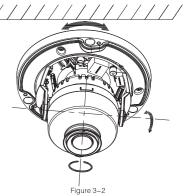

Step 6 Put the Dome 6 back on and fasten the locking screws 5

©—™ TIPS

For the models with vari-focal lens, you can also adjust the focus through XVR device.

Configuration

Power up the camera and connect it to XVR device with coaxial cable, then the live view screen is displayed. The following instructions will guide you to configure your camera.

NOTE

The number of the coaxial port on XVR will display at the lower left corner of the live view window to indicate the corresponding camera.

4.1 Opening Main Menu

Step 1 In the live view screen interface, right-click anywhere on the screen. The shortcut menu is displayed. See Figure 4-1.

 


Figure 4-1 The Main Menu interface is displayed. See Figure 4-2.

Step 2 Click Main Menu

FACE DETECT CAMERA B NETWORK & STORAGE D, SYSTEM 1, ACCOUNT 0 INFO

Figure 4-2

Right-click anywhere on the screen to return to the previous menu until you go back to the live view screen interface

4.2 Setting Audio Input

Step 1 In the Main Menu interface (Figure 4-2), select CAMERA > ENCODE > Encode

The Encode setting interface is displayed. See Figure 4-3.



Figure 4-3

Step 2 In the Channel list, select the camera that you want to configure according to the coaxial port number

Step 3 In the Main Stream column, click More Setting The More Setting interface is displayed. See Figure 4-4.

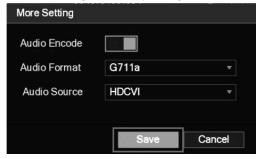


Figure 4-4

Step 4 In the More Setting interface, you can configure the audio settings.

- Enable Audio Encode function.
- . In the Audio Format list, leave to the default.
- In the Audio Source list, select HDCVI

Step 5 Click Save to save the settings.

The Encode setting interface is displayed.

Step 6 In the Encode setting interface (Figure 4-3), click Apply

The shortcut menu (Figure 4-1) is displayed.

4.3 Operating OSD Menu

Step1 In the live view screen interface, right-click within the live view window of the camera that you want to configure.

Step 2 Click PTZ.

The PTZ setting interface is displayed. See Figure 4-5.

 


Figure 4-5 Step 3 Click to see more options. See Figure 4-6.



Figure 4-6

Step 4 Click

The MENU OPERATION panel is displayed. See Figure 4-7.

The OSD menu of the corresponding camera is displayed on the live view

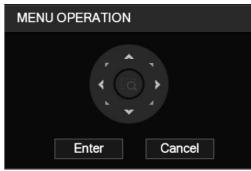


Figure 4-7

For the function of the buttons in the MENU OPERATION panel, see Table 4-1

Button	Function	Button	Function	
Enter	Enter or confirm an item	^	Select item	
Cancel	Exit OSD menu	< , >	Change item value	

Table 4-1

If there is "as the value of an OSD item, click Enter to go to the next level of this item. Click Return to go back to the previous level. Clicking Cancel is to exit OSD menu without saving the modifications.



Interfaces of different XVR may vary, the actual product shall prevail. The OSD menus of different cameras may vary, the actual product shall prevail



A CAUTION

In order to maintain the image quality and proper functioning of the device, please read the following maintenance instructions carefully and hold rigid adherence.

Maintaining Lens and Mirror Surface

Do not touch the image sensor directly. The lens and mirror surface are covered with antireflection coating, which could be contaminated or damaged and result in lens scratches or haze image when being touched with dust, grease, fingerprints and other similar substances. Dust and dirt could be removed with air blower, or you can wipe the lens gently with soft cloth that moistened with



so on to clean the device body, nor can strong, abrasive detergent be used.

Dome cover is an optical component, do not touch or wipe the cover with your hands directly during installation or operation. The following approaches can be used to deal with possible contamination.

- Removing Dust
- Wipe gently with non-oil soft brush or use air blower.
- · Removing Grease or Fingerprints

Wipe the cover gently with soft cloth to make it day, then moisten oil-free soft cloth or lens cleaning paper with alcohol or lens cleaner and wipe the cover gently. You may perform repeatedly until the cover is clean.