

Dome Network Camera

Application Quick Start Guide



ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD. V1.0.1



Table of Contents

1 Operating with DMSS	1
2 Installation	3
2.1 Packing List	3
2.2 Dimensions	3
2.3 Installing Camera	4
2.3.1 Installation Method	4
2.3.2 Installing SD Card	4
2.3.3 Attaching Camera	4
2.3.4 (Optional) Installing Waterproof Connector	5
2.3.5 Adjusting Lens Angle	6



1 Operating with DMSS

\square

Make sure that there are no obstacles and electromagnetic interference between the device and the router for best possible wireless performance.

Step 1 Add the device.

- 1) Tap + button on the upper-right corner of the DMSS home page to scan the QR code on the camera. If your DMSS fails to scan the QR code, tap **Manually enter SN**.
- 2) Select Wireless Camera.



<u>Step 2</u> Configure the device hotspot.

 \square

If you connect the device with Ethernet cable, please jump to <u>Step4</u> directly.

- 1) Make sure that the device is connected to power and enables device hotspot, and then click **Next**.
- 2) Go to Wi-Fi settings of your mobile phone, and then connect hotspot named DAPxxxxxxxx.
- 3) Create the username and password for the device and then tap **Next**.







Step 3 Configure the Wi-Fi.

Select your Wi-Fi network from SSID list and then enter the password.

- <u>Step 4</u> Configure the device information.
 - 1) Create the device name and password.
 - 2) Set the time zone and then click **Done**.

Figure 1-3 Configure the device information





2 Installation

2.1 Packing List

\square

- The tool required for the installation such as electric drill is not provided in the package.
- The operation manual and related tool information are contained in the disk or the QR code.

Figure 2-1 Packaging list			
Network Camera × 1	Manual $ imes$ 2	Adapter $ imes$ 1	Waterproof Connector $ imes$ 1
0			D
Screw Package × 1	CD-ROM/QR Code \times 1	Positioning Map $ imes$ 1	Antenna × 1
TIT			
Gasket × 1	Wrench \times 1		
0			

2.2 Dimensions





2.3 Installing Camera

2.3.1 Installation Method

Figure 2-3 Installation method



2.3.2 Installing SD Card

- SD card slot is available on select models.
- Disconnect the power before installing or removing the SD card.
- Do not open the cover for a long time to avoid spray in cameras.



Press the reset button for 10 seconds to reset the device.



2.3.3 Attaching Camera

\wedge

- Make sure that the mounting surface is strong enough to hold at least three times the weight of the camera and bracket.
- Remove the protective film after finishing installation.





2.3.4 (Optional) Installing Waterproof Connector

\square

This part is needed only when a waterproof connector comes with the camera and the camera is used outdoors.







2.3.5 Adjusting Lens Angle

Figure 2-8 Adjust lens angle



ENABLING A SAFER SOCIETY AND SMARTER LIVING